
 



Audi
CD changer
wiring

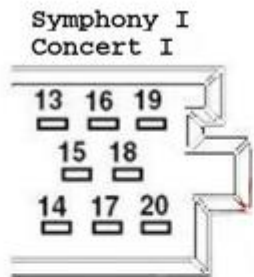

CD changer



CD changer

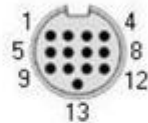

Function	Radio plug	8-pin DIN	13-pin DIN	Phatnoise
DI (CDC-->HU)	13	2	11	25
DO (HU-->CDC)	14	6	13	24
CLOCK	15	8	9	12
DATA GROUND	chassis		5	4,16
+12v	16	1	10	10,13
ACC	17	7	7	14
AUDIO GROUND	18	4	2,4	3
LEFT	19	5	3	1
RIGHT	20	3	1	2